


Regulator assignment (TPS65950 and other) still pending

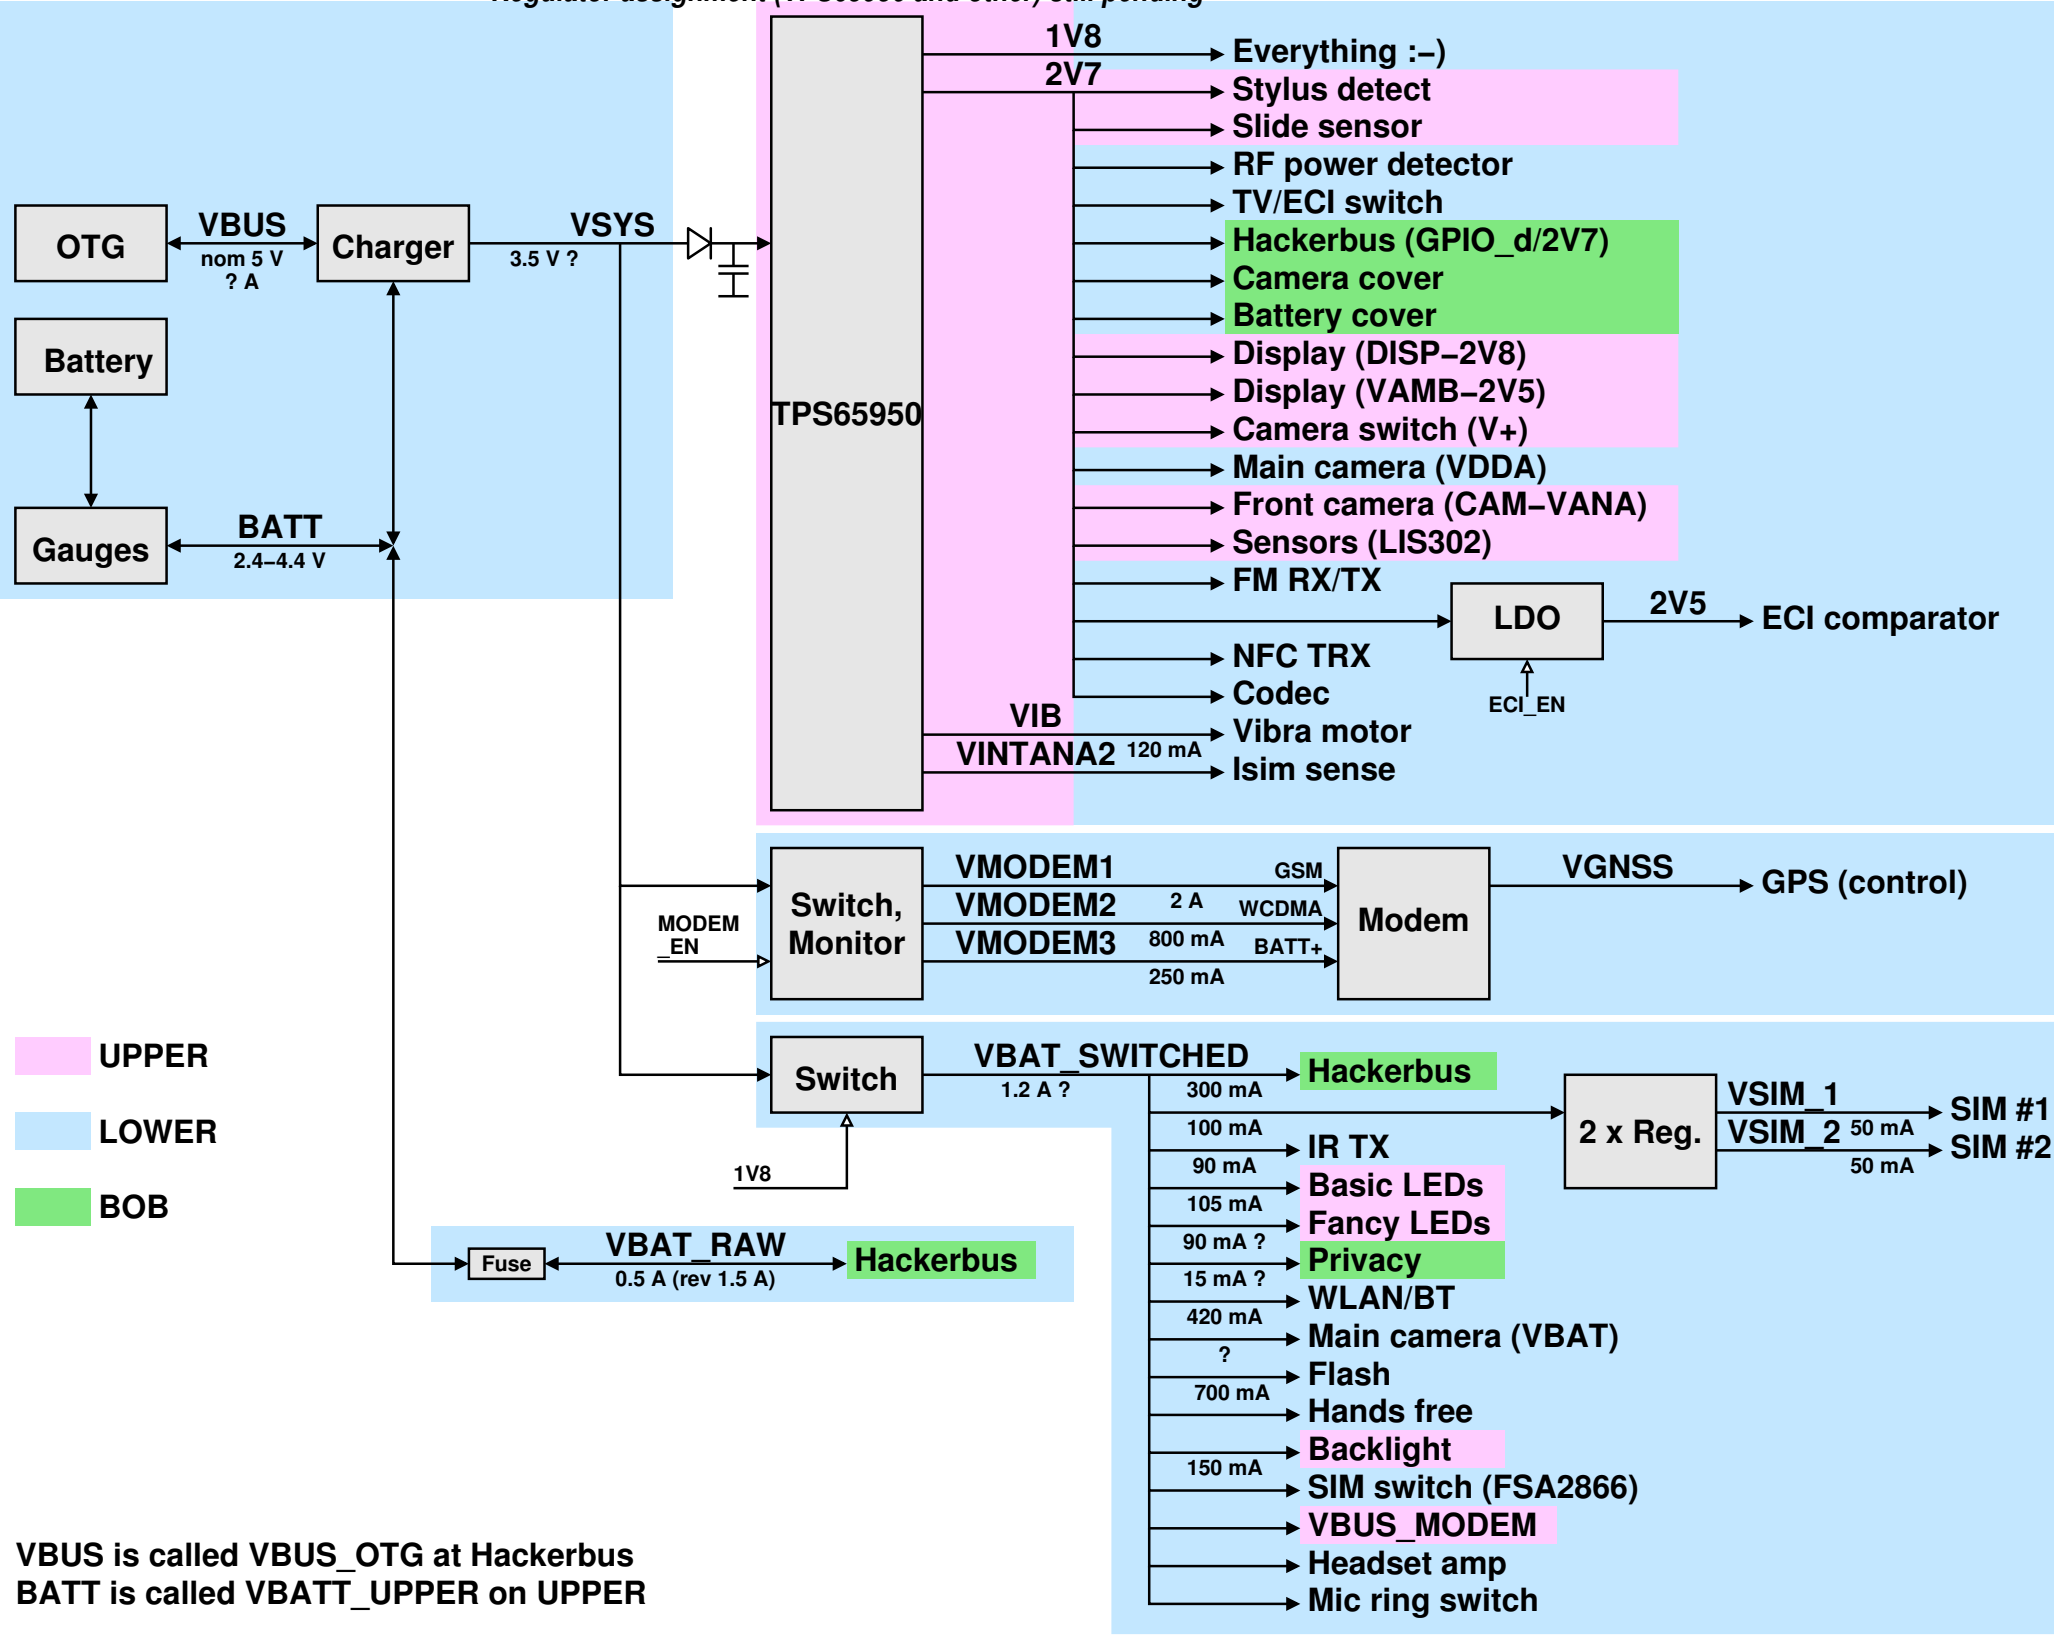

VBUS is called VBUS\_OTG at Hackerbus  
 BATT is called VBATT\_UPPER on UPPER

